



# How to fix a MX Master Permanently active Gestures

Fixing the gesture control on a logitech MX Master

Written By: callumblackall





## TOOLS:


- [T4 Torx Screwdriver](#) (1)
  - [Philips Head Screwdriver: Size J1](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
  - [Pro Tech Toolkit](#) (1)
-

## Step 1 — Tear down guide -



- <https://toemat.com/logitech-mx-master-fi...>

## Step 2

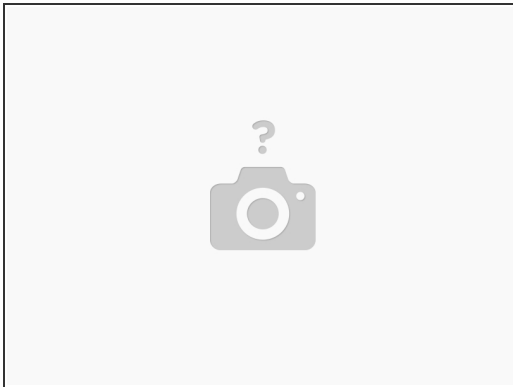

- push the flexible button up and loosen and retighten the screws around the pcb

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-10 06:38:04 AM.